



14297-RF

Item Number 4669687

Mechanical expander tool set with 6 heads (3/8" to 1") for expanding soft copper pipe

Accessories

9883750	RFA-209-STYLO	Deburring tool
4687051	RFA-209-STYLO- HD	Deburring tool
9881649	RFA-209	Inner-outer reamer
9881680	14297-1 1/8"	Spare head \varnothing 1 1/8"
4496371	14297-1 5/8"	Spare head \varnothing 1 5/8"
4669768	14297-RF-1 1/8"	Spare head \varnothing 1 1/8"
4669776	14297-RF-1 3/8"- 35MM	Spare head \varnothing 1 3/8"
4669785	14297-RF-1 5/8"	Spare head \varnothing 1 5/8"
4687983	14297-RF-1/4"	Spare head \varnothing 1/4"
4687344	HY-EX-1/4"	Spare head \varnothing 1/4"
4687346	HY-EX-5/16"	Spare head \varnothing 5/16"
4687347	HY-EX-1 3/8"	Spare head \varnothing 1 3/8"
4687348	HY-EX-1 5/8"	Spare head \varnothing 1 5/8"
4687370	HY-EX-1 1/8"	Spare head \varnothing 1 1/8"
4687477	HY-EX-1 1/2"	Spare head \varnothing 1 1/2"
4687478	HY-EX-1 1/4"	Spare head \varnothing 1 1/4"

Spare Parts

9881682	14297-7/8"	Spare head ø 7/8"
9881683	14297-3/4"	Spare head ø 3/4"
9881684	14297-5/8"	Spare head ø 5/8"
9881685	14297-1/2"	Spare head ø 1/2"
4687345	HY-EX-1"	Spare head ø 1"
4687365	HY-EX-5/8"	Spare head ø 5/8"
4687366	HY-EX-1/2"	Spare head ø 1/2"
4687367	HY-EX-3/8"	Spare head ø 3/8"
4687368	HY-EX-3/4"	Spare head ø 3/4"
4687369	HY-EX-7/8"	Spare head ø 7/8"
9881681	14297-1"	Spare head ø 1"
4669709	14297-RF-3/8"	Spare head ø 3/8"
4669717	14297-RF-1/2"	Spare head ø 1/2"
4669726	14297-RF-5/8"	Spare head ø 5/8"
4669734	14297-RF-3/4"	Spare head ø 3/4"
4669742	14297-RF-7/8"	Spare head ø 7/8"
4669750	14297-RF-1"	Spare head ø 1"
9881686	14297-3/8"	Spare head ø 3/8"